



Hardware (Included) 1 – 5mm Allen wrench
6 – 35mm screws
2 – 20mm screws

People 1 Person
Time 10 - 15 minutes

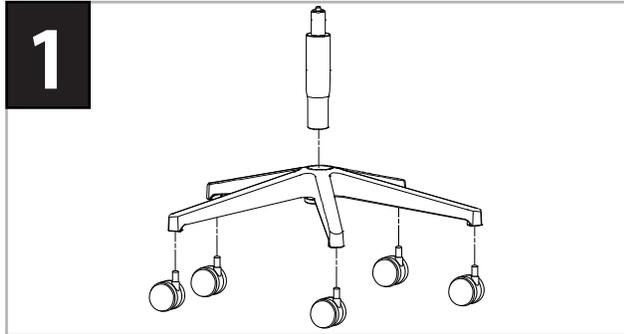


1
Install Casters & Cylinder
Firmly press all casters into base.
Set cylinder into base.

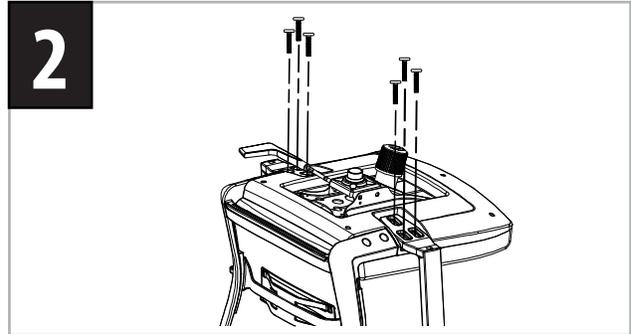

2
Install Arms
Install six 35mm long screws to attach arms to seat.
Make sure other holes on bottom cover are not blocking threads.




3
Install Seat & Back Assembly
Place seat assembly upright and onto base assembly.

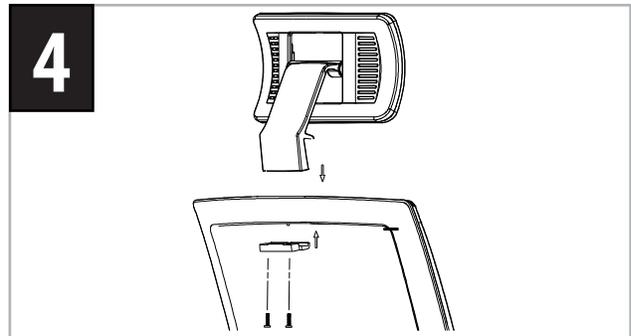


4
Install Headrest
Loosen headrest clamp screws. Then attach headrest clamp around the back lip of the chair and tighten screws. Ensure headrest is tight.


Replacement Instructions

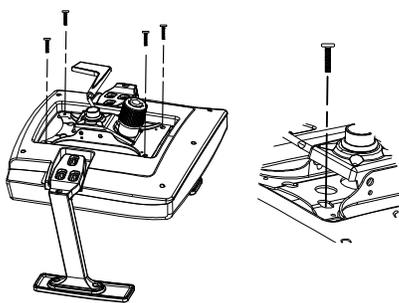

Mech Install
Install two 25mm screws on front of mechanism. Install two 35mm screws on rear of mechanism.

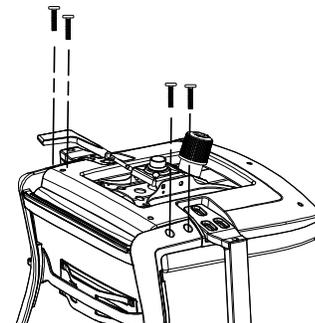


Back Install
Install four 40mm screws to secure backrest.

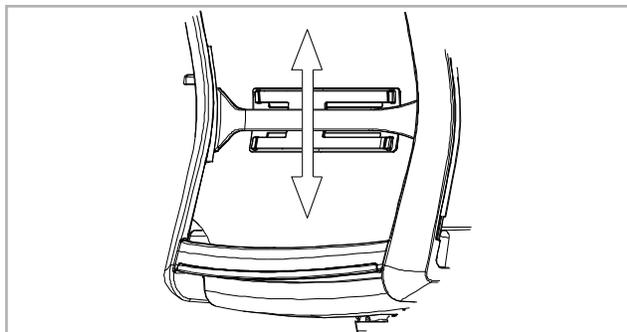

Lumbar
Adjust lumbar by simply sliding backpiece up and down.



Tension
Rotate knob clockwise to tighten backrest tilt tension and counter-clockwise to loosen tension.

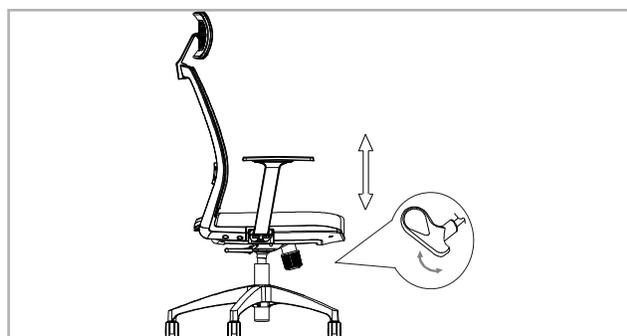


Height
Pull upward on lever to adjust seat height.



Tilt
Push lever arm inward to lock back tilt. Pull lever arm out to allow backrest to freely tilt.



Armrest
The arm pad can slide forward and backward. Depress the button on the outside of the arm to adjust height.

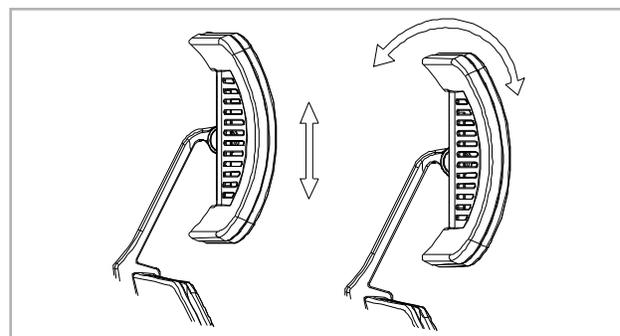

Headrest
Headrest adjusts vertically and can swivel.